




Toshiba Chromebook CB35-A3120 Speakers Replacement

This guide is to replace the speakers in a Toshiba ChromeBook.

Written By: Jayce Houghton

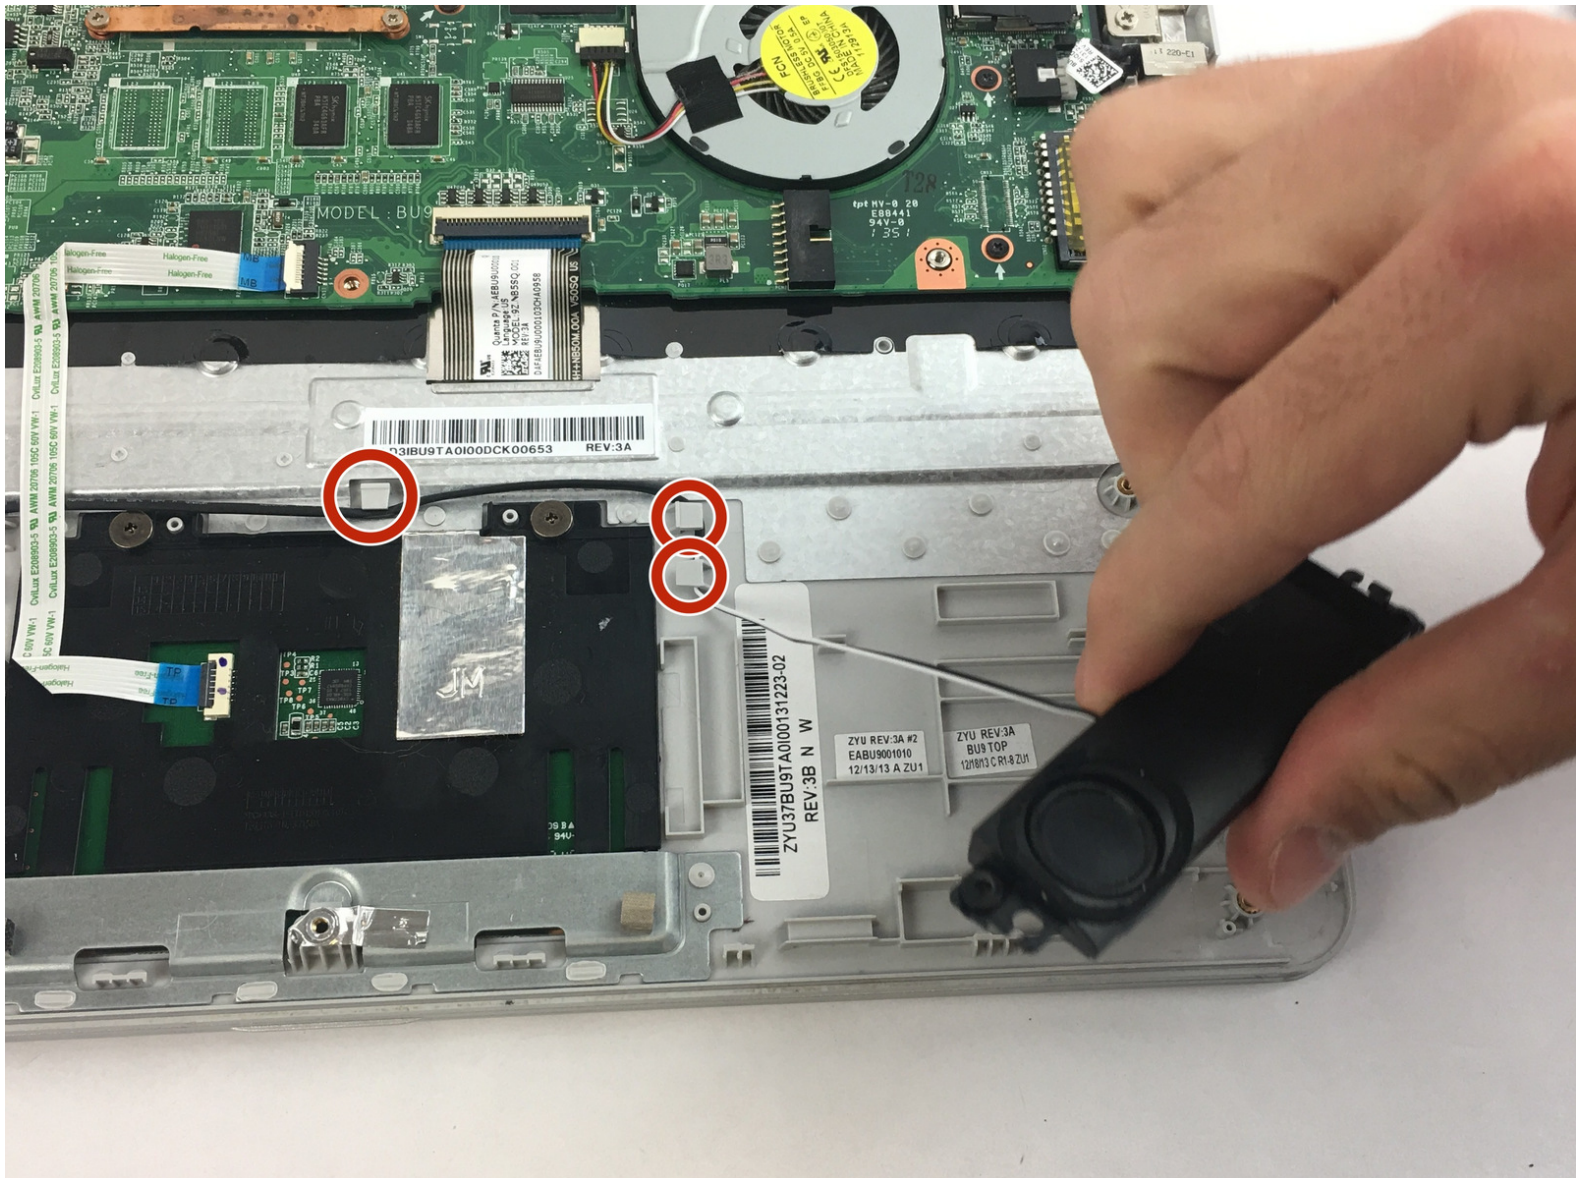

INTRODUCTION


In this guide we plan to remove the internal speakers from the Toshiba ChromeBook and replace them with new ones.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [64 Bit Driver Kit](#) (1)
-

Step 1 — Speakers

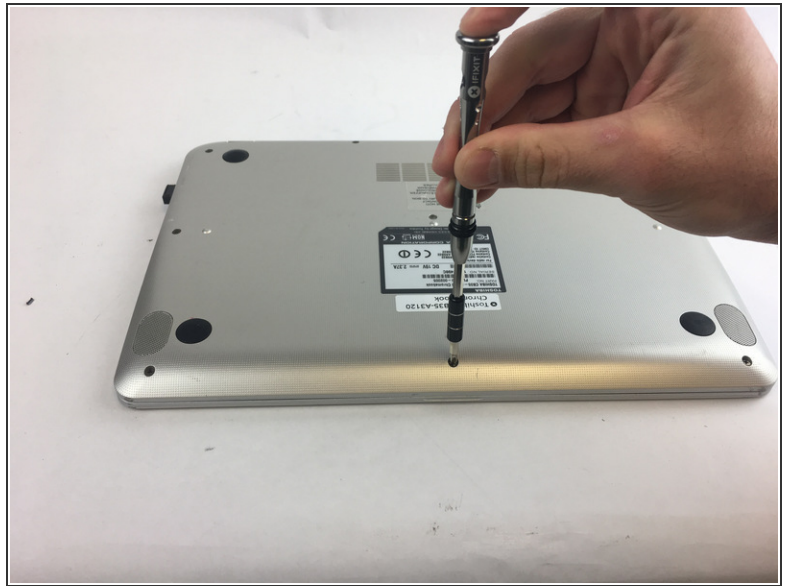


- Using a Y1 screw driver head remove all ten .9mm screws from the back cover
- Set the screws aside in preparation for reassembly

Step 2




- Remove the back cover by placing a prying tool in the SD slot and popping the clips out of place.

Step 3

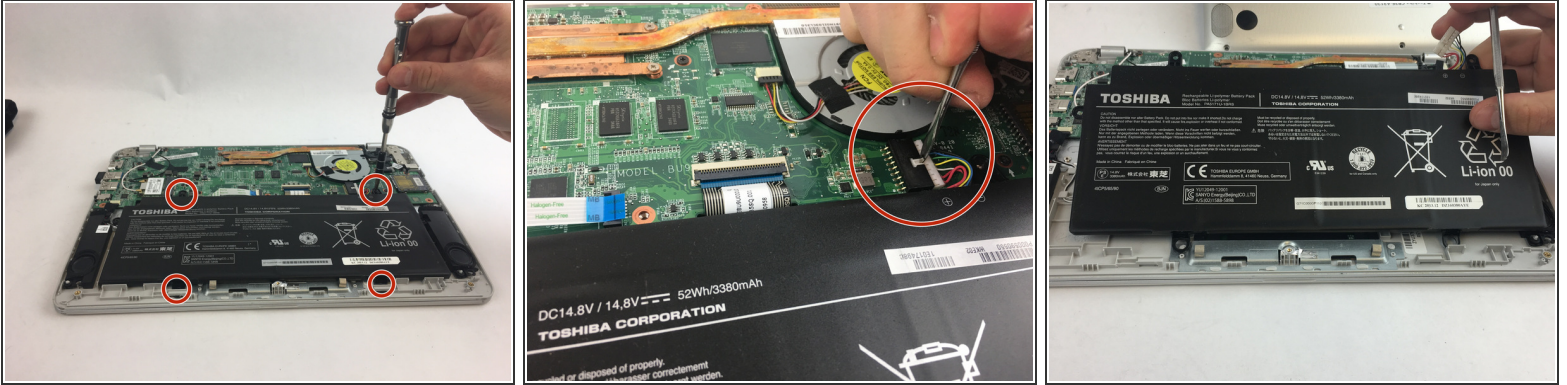



- Unscrew the battery by using a J1 screw driver head, and place the four .7mm screws off to the side
- Using a pry tool, pop the battery connector out of place and gently lift the battery upward.

Step 4

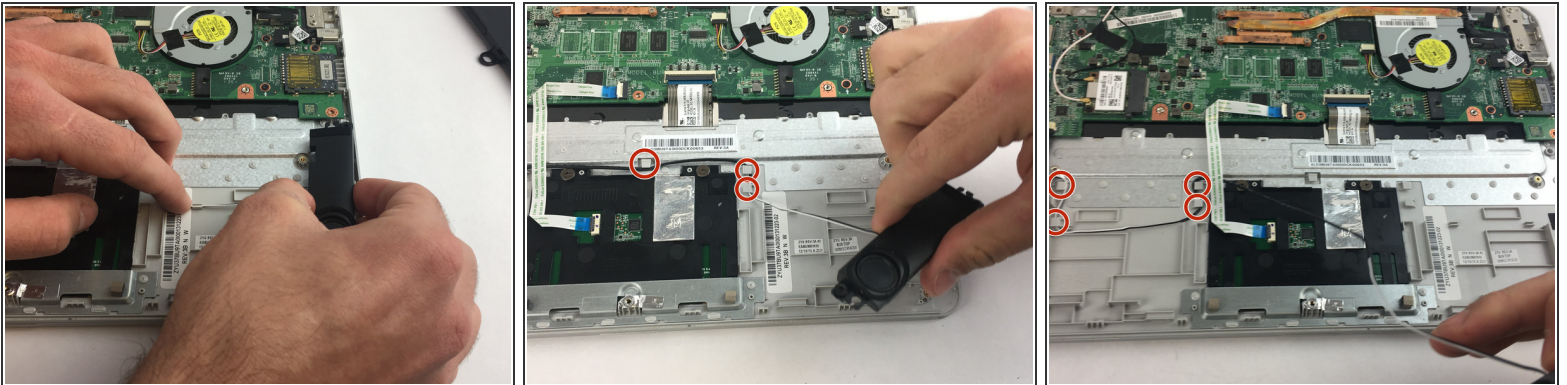

- Remove the right side speaker by popping it out of place with your finger
- Follow the speaker wire along the clips underneath the battery until you reach the left hand speaker

Step 5

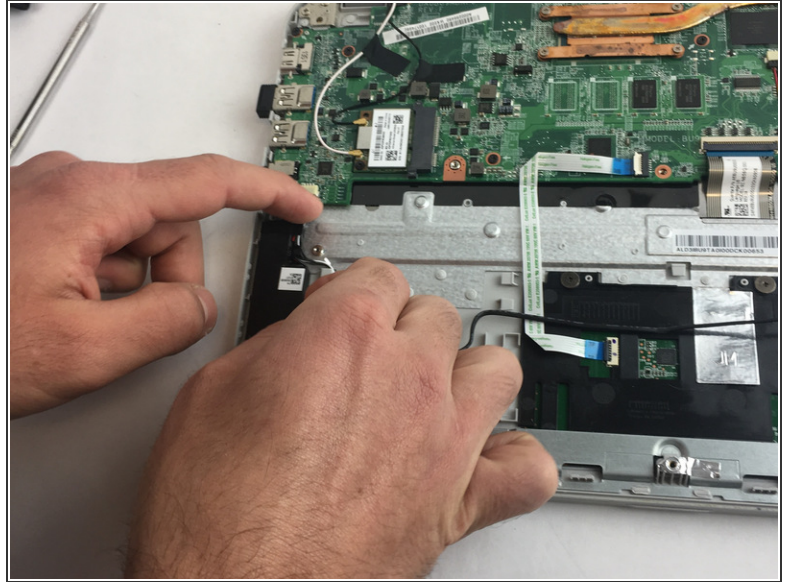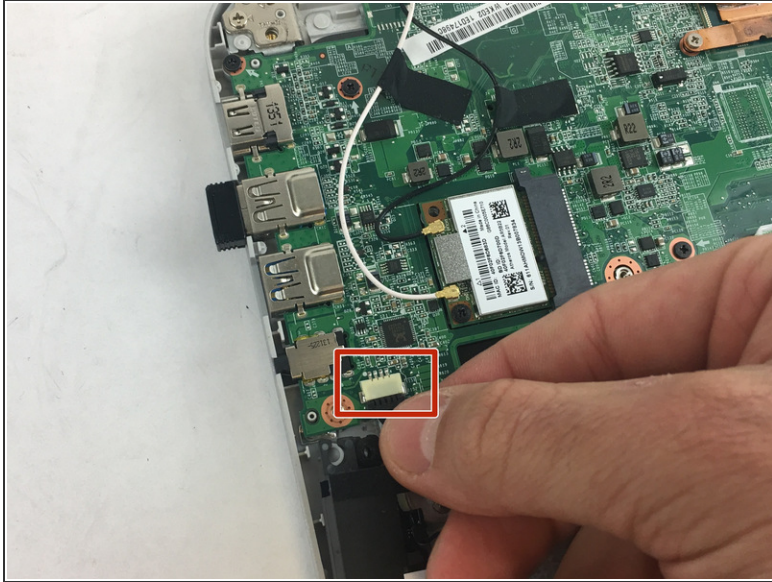

- Unplug the connector wiring the speaker to the mother board.
- Pop the speaker out of the computer, similar to the method used in the previous step.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-26 12:01:58 PM.